
**AIP LITHUANIA** EYVI AD 2.24-03 - 1

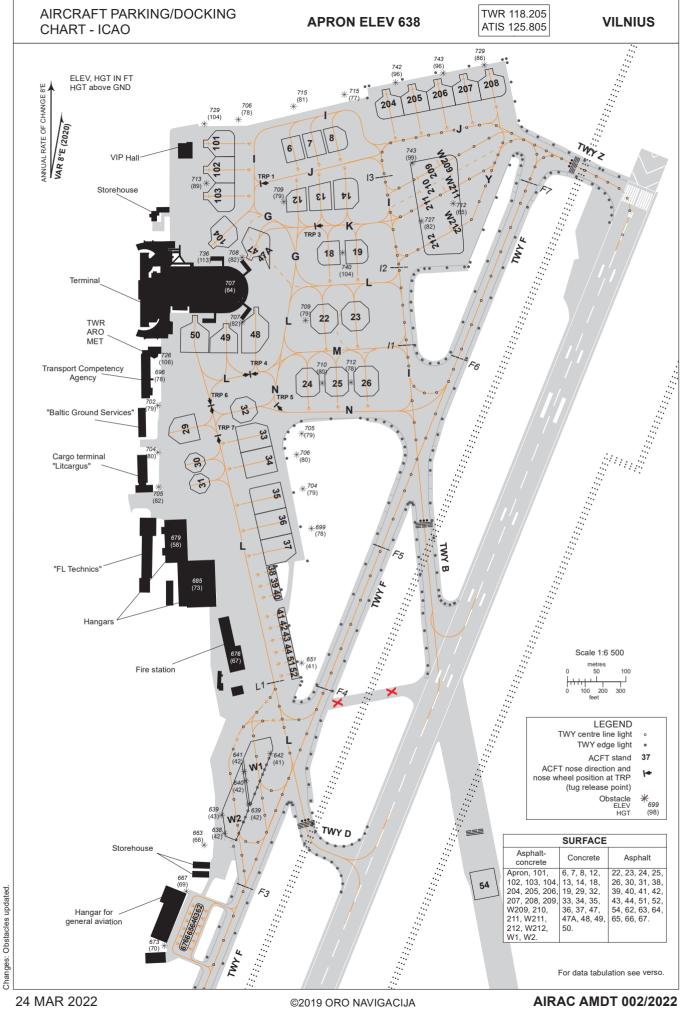

## **AERONAUTICAL DATA TABULATION**

TAXIING ROUTES		
Route	Description	Max wingspan, M
G	From the ACFT stand 104 to the intersection with route L.	36
I	From the ACFT stand 104 to ACFT stands 6-8 north and to INT with J. From INT with J to INT with TWY F.	36 65
J	From INT with I to INT with I. From INT with I to INT with TWY Z.	36 52
K	From the middle of taxiing route G to the intersection with route I.	42
L	From the INT with I to the INT with taxiing route G. From the INT with taxiing route G to ACFT stand 48. From ACFT stand 48 to the INT with TWY's D and F.	52 39.2 42.5
M	From the routes N and L INT to the intersection with route I.	42.6
N	From the routes M and L INT to the intersection with route I.	36
Υ	From the eastern part of ACFT stand W212 to the intersection with TWY Z.	65

## **NOTES**

- 1. ACFT cross bleed engine start-up procedures and limitations:
- 1) Engines start-up using increased power on stands: 47, 48, 49, 50, 29, 30 and 31 is prohibited;
- 2) Engines start-up using increased power allowed on the:
- Stand 7 when ACFT nose in north and stand 13 vacant:
   Stand 14 when ACFT nose in south and stand 8 vacant:
- Stand 12 when ACFT nose in south and stand 6 vacant; Stand 19 when ACFT nose in south and stand 14 vacant;
- Stand 13 when ACFT nose in south and stand 6 vacant; Stand 19 when ACFT nose in south and stand 14 vacant; Stand 13 when ACFT nose in north and stands 24 and 25 vacant;
- Stand 13 when ACFT nose in north and stand 18 vacant; Stand 23 when ACFT nose in north and stand 26 vacant.
- Stand 15 when ACT 1 hose in horizontal and stand 16 vacant, Stand 25 when ACT 1 hose in horizontal and stand
- 3) Engines start-up using increased power allowed:
- On the other stands not referred in the items 1) and 2); On TRP (Tug Release Point): 1, 3, 4, 5, 6, 7 points that are marked on taxiing routes J, K, L, N.
- 4) Use the minimum engines power setting while taxiing on the apron.
- 2. Taxiing to stands 204-208 via taxiing route J only.
- 3. ACFT parking to stand 54 is permitted strictly by coordination with Airport Operations Service: Tel: +370 5 273 93 33, Mob. +370 612 90 122, e-mail: ops@vno.lt.
- 4. Taxiing to stands 22 and 23 are allowed only via taxiing routes I and M. Taxiing via taxiing route M using the minimum power of the aircraft engines only.
- 5. Towing from stand 29 with the tug only.
- 6. Taxiing into stands 30, 31, 33-37 only via taxiing route L.
- 7. Taxiing out of stands 30, 31, 33-37 on own engines power is prohibited and carried out by pushing on taxiing route L with a tug only.
- 8. Taxiing out of stands 204-208 on own engines power is prohibited and carried out by pushing on taxiing route J with a tug only.
- 9. ACFT parking stand 47A is used without a tow and aerobriges.
- 10. Taxiing to stands 209, 210, 211, 212 via taxiing route Y only.
- 11. Stands W1, W2, W209, W211, W212 used for de-icing.
- 12. Taxiing to stands W209, W211, W212 via taxiing route I only.
- 13. Stands 101-104, 204-209, 211, W1, W2, W209, W211, W212 for ACFT with wingspan up to 36 M.
- 14. Stand 210 for ACFT with wingspan up to 65 M. ACFT parking and taxiing to/from stand 210 is only available if stands 209, 211 are empty.
- 15. ACFT parking and taxiing to/from stand W209 is only available if stands 209, 210 are empty.
- 16. ACFT parking and taxiing to/from stand W211 is only available if stands 210, 211 are empty.
- 17. Taxiing of ACFT with wingspan more than 42.6 M along taxiing route M for parking into stands 22 and 23, ACFT stand 26 must be vacated.
- 18. Stand 212 for ACFT with wingspan up to 60.3 M.
- 19. Stand 212 available for ACFT with height up to 17.5 M and length up to 59 M.

Changes: taxiing routes I, J, M, N information; note 16 withdrawn, 4, 13 changed.